

ASSEMBLY


a. base



b. collar



c. button

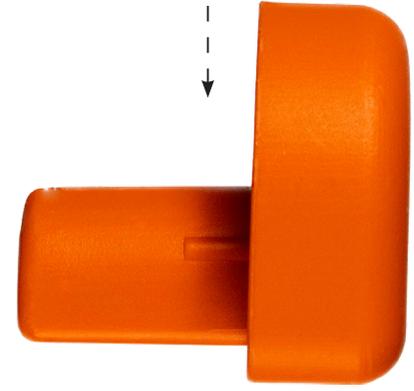

52mm x 12#  
SS Wood Screw



62mm x 12#  
SS Wood Screw

# ASSEMBLY

(A)

Align base then fit the 52mm x 12# screw, the head of the screw should be seated & flush with the base moulding when correctly fitted.



(B)

Fit the button & collar to the base moulding, when the collar & button are aligned & in the finished position use the 62mm x 12# screw supplied to secure the button, the collar & the base assembly to the wall. The collar should be flush with the base, care should be taken not to over tighten & or damage the mouldings. Note hooks should be fitted to a minimum 35mm x 100mm baton or timber substrate. The use of fasteners other than that supplied may alter the stated holding potential of this product.




(C)



vertical alignment assistance mark



150mm - 300mm centres



45mm

